




BULK FEED SYSTEM

CONTENTS

Cartridge
Bottle
Plastic clamp
Two screws

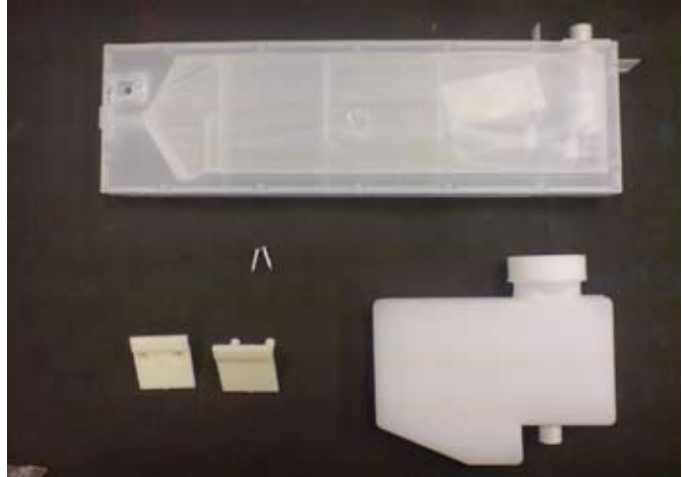

STEP 1

REMOVE COVER FROM SEAL




STEP 2

PLACE BOTTLE ONTO CARTRIDGE




STEP 3

PUSH BOTTLE DOWN SO
THE RED SEALS DO NOT
SHOW

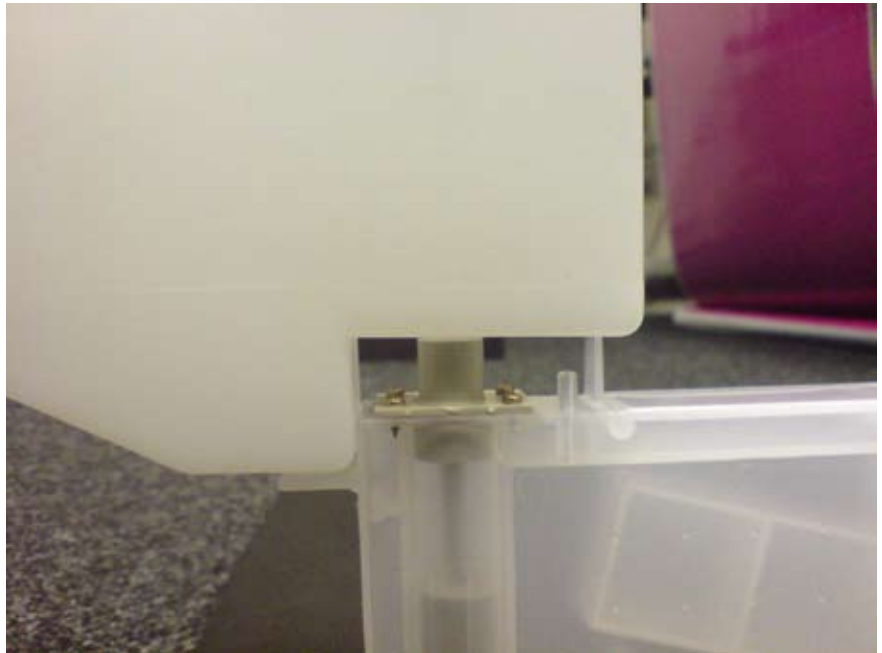


IT SHOULD LOOK
LIKE THIS

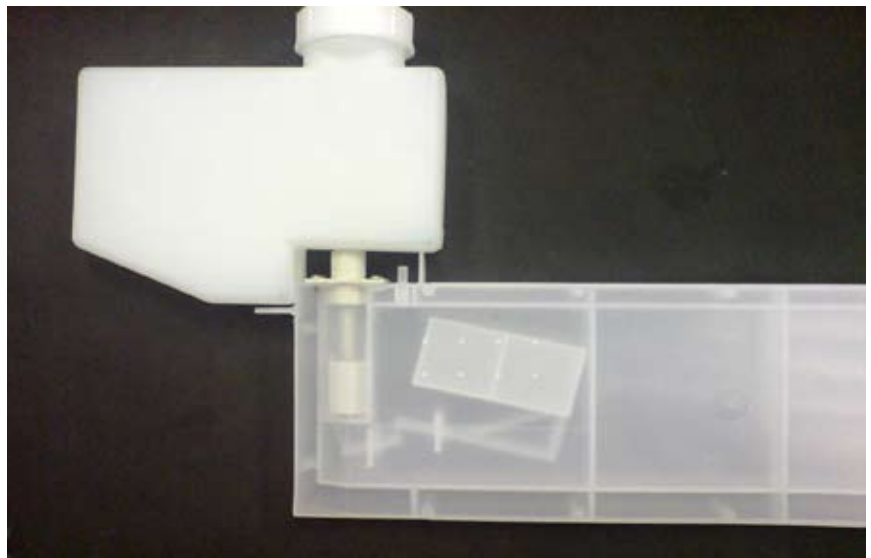

STEP 4


PLACE PLASTIC CLAMP WITH
SCREW HOLES ON THE LEFT
SIDE OF CARTRIDGE

AND INSERT SCREWS

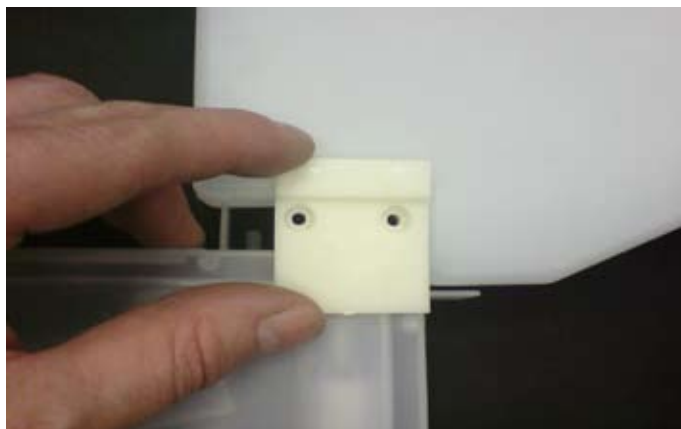



CORRECT ✓

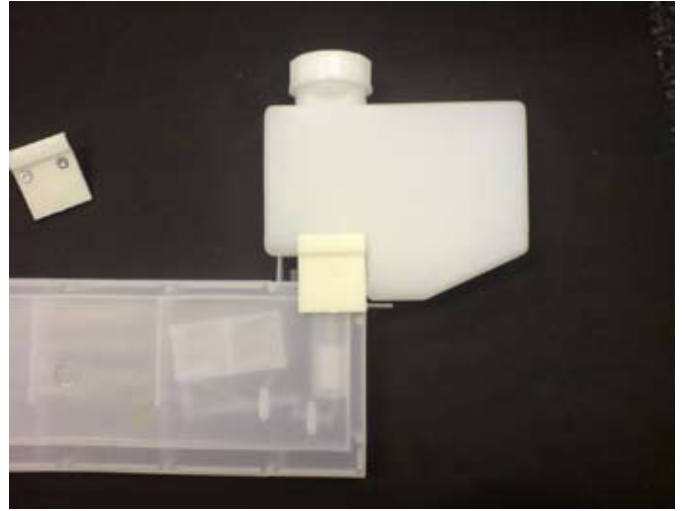


WRONG ✗

IT SHOULD LOOK LIKE THIS:



STEP 5

PIERCE 2 HOLES IN THE TOP OF THE SEAL ON THE INK BOTTLE TO HELP WITH INK FLOW AND REDUCE INK SPILL

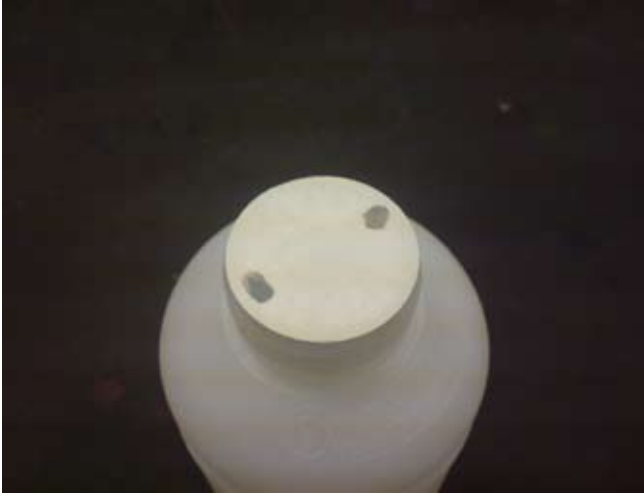

CORRECT




WRONG



STEP 6

WHEN POURING BE CAREFUL NOT TO SPILL THE INK DOWN THE BOTTLE AS THIS WILL LEAVE INK IN THE BASE OF THE CARTRIDGE AND OVER A SHORT TIME WILL MELT ANY PLASTIC PARTS ON THE PRINTER.

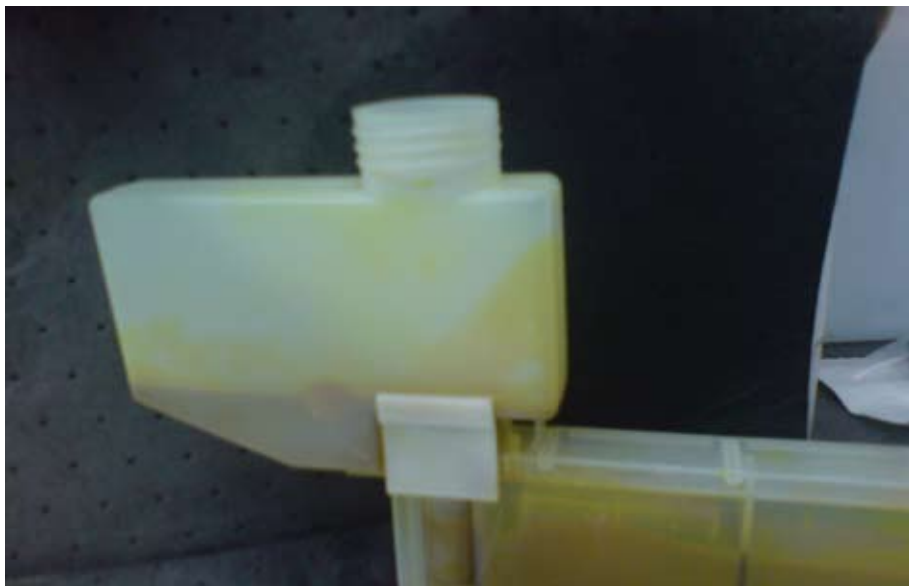

CORRECT



WRONG



IMPORTANT

PLEASE ENSURE YOU DO NOT SPILL THE INK AS IT MAY CAUSE ERRORS WITH YOUR PRINTER.

DISCLAIMER:

The information provided above is correct to the best of our knowledge at the time of the production of this document. ITL do not accept responsibility for errors or emissions.